

WARNING: Verify IR Cable Compatibility

IR cables have a variety of pinout configurations since there is no industry standard. **Verify compatibility of the system with the pinout below to ensure that the supply is not shorted to ground!**

This product is designed to be used between an IR detector and a distribution box, but not between a distribution box and an IR emitter. **THIS IR CABLE DOES NOT SUPPORT 12V SYSTEMS.** Use in incompatible configurations will damage the product and void the warranty.

Inneos recommends the use of the 5V Vanco IR control products with the Real4K Extenders.



Tip: Signal
Ring: 5V
Sleeve: Ground



Tip: Signal
Ring: Not connected
Sleeve: Ground

R4K-IRB Cable Pin Connections for IR signals

Contact Inneos at contact@inneos.com or visit www.inneos.com for more information.